Owner's Operating Service Instruction Manual

10¢

Model No. 125-280A

- ASSEMBLY
- OPERATION
- REPAIR PARTS

21" SELF-PROPELLED ROTARY MOWER

WARRANTY

For one year from date of purchase, MTD Products Inc will replace for the original purchaser, free of charge, F.O.B. factory or authorized service firm, any part or parts found to be defective in material or workmanship. All transportation charges on parts submitted for replacement under this warranty must be paid by the purchaser. This warranty does not include replacement of parts which become inoperative through misuse, excessive use, accident, neglect, improper maintenance or alterations by unauthorized persons. This warranty does not include the engine, motor, battery, battery charger or any component parts thereof. For service on these units, refer to the applicable manufacturer's warranty.

The above warranty will apply only to the original owner and will be effective only if the warranty card has been properly processed. It will not apply where the unit has been used commercially.

Warranty service is available through your local authorized service dealer or distributor. UNDER NO CIRCUMSTANCES WILL THE RETURN OF A COMPLETE UNIT BE ACCEPTED BY THE FACTORY UNLESS PRIOR WRITTEN PERMISSION HAS BEEN EXTENDED.

MTD PRODUCTS INC • 5389 WEST 130th STREET • P. O. BOX 2741 CLEVELAND OHIO 44111

PRINTED IN U.S.A. FORM NO. 770-5626

IMPORTANT

SAFE OPERATION PRACTICES FOR WALK-BEHIND MOWERS

TRAINING

1. Read the Operating and Service Instruction Manual carefully. Be thoroughly familiar with the controls and the proper use of the equipment.
2. Never allow children to operate a power mower.
3. Keep the area of operation clear of all persons, particularly small children and pets.

PREPARATION

1. Thoroughly inspect the area where the equipment is to be used and remove all stones, sticks, wire, bones and other foreign objects.
2. Do not operate equipment when barefoot or wearing open sandals. Always wear substantial footwear.
3. Check the fuel before starting the engine. Do not fill the gasoline tank indoors, when the engine is running, or while the engine is still hot. Wipe off any spilled gasoline before starting the engine.
4. Disengage the self-propelled mechanism or drive clutch on units so equipped before starting the engine.
5. Never attempt to make a wheel adjustment while the engine is running.
6. Mow only in daylight or in good artificial light.
7. Never operate the equipment in wet grass. Always be sure of your footing; keep a firm hold on the handle and walk, never run.

OPERATION

1. Do not change the engine governor settings or overspeed the engine.
2. Do not put hands or feet near or under rotating parts. Keep clear of the discharge opening at all times.
3. Stop the blade(s) when crossing gravel drive, walks or roads.
4. After striking a foreign object, stop the engine, remove the wire from the spark plug, thoroughly inspect the mower for any damage, and repair the damage before restarting and operating the mower.
5. If the equipment should start to vibrate abnormally, stop the engine and check immediately for the cause. Vibration is generally a warning of trouble.
6. Stop the engine whenever you leave the equipment, before cleaning the mower housing, and when making any repairs or inspections.
7. When cleaning, repairing or inspecting, make certain the blade and all moving parts have stopped. Disconnect the spark plug wire, and keep the wire away from the plug to prevent accidental starting.
8. Do not run the engine indoors.
9. Shut the engine off and wait until the blade comes to a complete stop before removing the grass catcher or unclogging chute.
10. Mow across the face of slopes, never up-and-down. Exercise extreme caution when changing direction on slopes. Do not mow excessively steep slopes.
11. Always disconnect electric mowers (line operated) before cleaning, repairing or adjusting.
12. Never operate mower without proper guards, plates or other safety protective devices in place.
13. Keep washout ports and other mower-housing service openings closed when mowing.

MAINTENANCE AND STORAGE

1. Check the blade and engine mounting bolts at frequent intervals for proper tightness.
2. Keep all nuts, bolts, and screws tight to be sure the equipment is in safe working condition.
3. Never store the equipment with gasoline in the tank inside of a building where fumes may reach an open flame or spark. Allow the engine to cool before storing in any enclosure.
4. To reduce fire hazard, keep the engine free of grass, leaves, or excessive grease.
5. Check the grass catcher bag frequently for wear or deterioration. Replace with new bag for safety protection.

ASSEMBLY INSTRUCTIONS

HANDLE ASSEMBLY

1. Remove the loose hardware from the assembly pack. You will need a screwdriver and a 5/16" wrench, either a socket as shown in figure 1 or an open end wrench.

2. Assemble the lower handle to the handle brackets as shown in figure 2.

3. Secure the handle with cotter hairpins on both sides. See figure 2.

4. Place the handle panel over the lower handle and fasten with the handle panel screw using a 5/16" wrench. See figure 3.

5. Place the upper handle over the lower handle and line up the holes as shown in figure 4.

6. Insert the curved head bolt from the inside and tighten the knob by hand. See figure 4.

7. Place the throttle control in the handle panel and assemble it with the two throttle screws using a screwdriver. See figure 5.

8. Use the cable clip to fasten the throttle control wire to the lower handle.

9. Check ALL nuts and bolts for correct tightness.

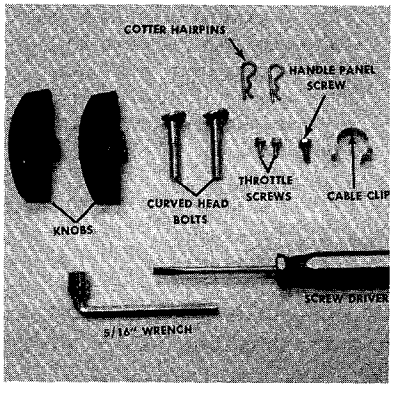

FIGURE 1.
LOOSE HARDWARE AND TOOLS

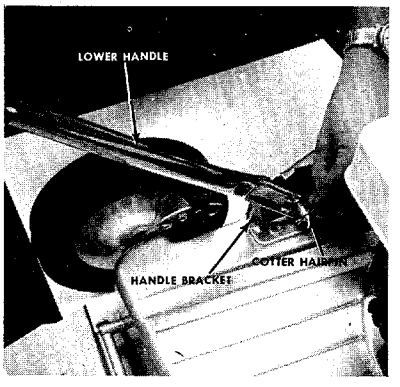

FIGURE 2.
LOWER HANDLE ASSEMBLY

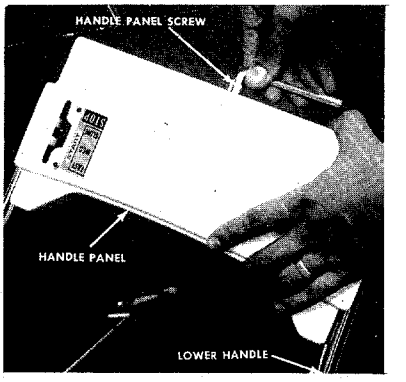

FIGURE 3.
HANDLE PANEL ASSEMBLY

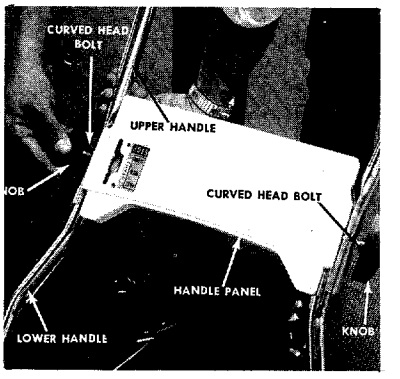

FIGURE 4.
UPPER HANDLE ASSEMBLY

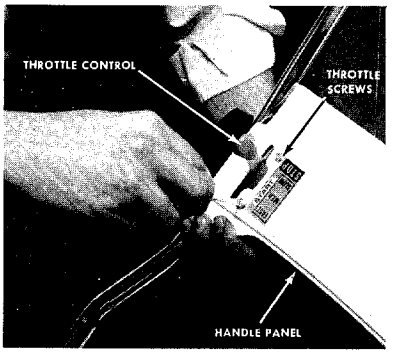

FIGURE 5.
THROTTLE CONTROL ASSEMBLY

NOTE

It may be necessary to spread the ends of the lower handle outward slightly to assure a snug fit against the bracket mounting area.

CAUTION

Please note that the chute deflector on your mower is in an upright position. It is held in that position by a shipping block. This block is used for shipping purposes only. It must be removed and discarded before your mower is put into operation.

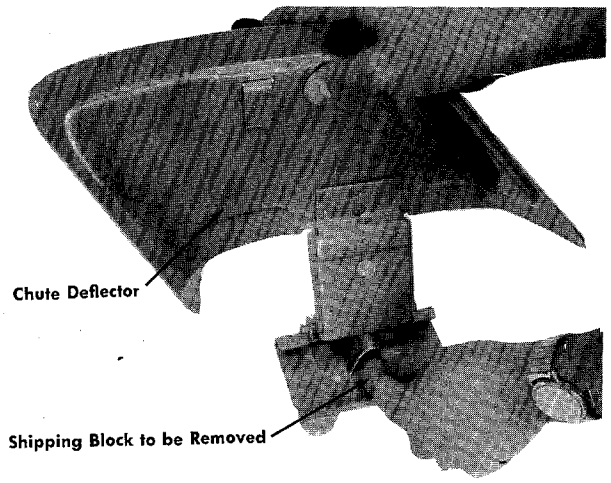

START ENGINE

With the throttle control lever conveniently mounted on the handle, start, fast, slow and stopping of the engine is conveniently controlled with one lever.

After the engine has been properly fueled and oiled (refer to engine operating and maintenance instructions) start engine in the followig manner.

RECOIL STARTER

1. Move throttle control lever to "START" position.
2. Crank engine, pull recoil with a quick firm pull. Do not pull out so far that rope stops with a jerk as this will cause rope failure. Do not allow rope and handle to snap back into place.
3. After two or three full firm pulls on recoil, or as soon as engine fires, move throttle control to run position.
4. Operate a new engine at intermediate speeds and light load for the first few hours as you would a new automotive engine.
5. To stop engine, move speed control lever to stop position.
6. If carburetor needs adjustment to start or for operation, see "Carburetor Readjustment" section.

NOTE

A brief break-in period is essential to insure maximum engine life. This consists of running the engine at half-speed for a period of time required to use one tank of gasoline. This is necessary on the initial run only. It is also recommended that the oil be changed after five (5) hours of operation. This allows for the removal of impurities which may have accumulated during the break-in period. Subsequent oil changes should be made as stated in the engine manual. Always check oil before using your mower. Be sure crankcase is full.

ADJUSTMENTS

CAUTION

Do not at any time make any adjustment to lawn mower without first stopping engine and disconnecting spark plug wire.

NOTE

For shipping purposes your mower is set with the wheels in a low cutting height position. For best results raise the cutting height position until it is determined which height is best for your lawn.

1. CUTTING HEIGHT

An adjusting plate and thumb lever at each wheel position provides cutting height adjustment. Each adjusting plate has five holes. Height of cut will be changed when the thumb lever is moved from one hole to another. Simply depress thumb lever towards wheel and move wheel and lever assembly to desired position. All wheels must be positioned in relative height of cut positions.

2. BELT

The belt requires no adjustment. The idler maintains the proper tension on the belt at all times.

3. THROTTLE

If adjustment becomes necessary, the throttle control wire assembly can be reset as follows:

a. Loosen, but do not remove, screw securing throttle control wire assembly at engine.

b. Move throttle control lever on handle to "FAST" position.

c. Move lever, to which control wire is fastened at engine, to full open position and retighten screw to secure throttle control wire assembly.

USING YOUR ROTARY MOWER

For best results, do not cut wet grass because it tends to stick to the underside of the mower thus preventing proper discharge of grass clippings. If wet grass must be cut, reduce walking speed to help distribute the clippings more effectively.

LUBRICATION

IMPORTANT: Always stop engine and disconnect spark plug wire before cleaning, lubricating or doing any kind of work on lawn mower.

Engine — Follow engine manual for lubrication instructions.

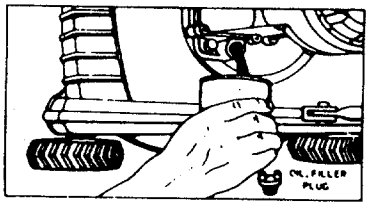

NOTE: FILL AND DRAIN OIL FROM OIL FILL PLUG.

Always disconnect spark plug cable during repairs, refueling or changing oil. Engine oil may be drained through oil filler opening by tilting the mower on its side. Change oil after first 5 hours of operation while engine is warm. Thereafter, change oil every 25 hours of operation while engine is warm.

Chain — Lubricate periodically with light engine oil (SAE No. 10 or 20).

Controls — Lubricate periodically the control assemblies and conduit wire with light engine oil for ease of operation.

Wheels — Front wheel bearings are of self-lubricating Fortiflex. They require no lubrication. Rear drive wheels are equipped with sintered bearings. Lubricate at least once a season with light oil.

Protective Shield — The pivot points on the protective shield should be lubricated periodically with light oil to prevent any rust or binding.

Chute Deflector — The torsion spring and pivot point should be lubricated periodically with light oil to prevent any rust or binding. Deflector must work freely.

Cutting Blade — The blade may easily be removed for grinding or replacement as follows:

1. Remove bolt and lockwasher holding blade and blade adapter to engine crankshaft.

2. Remove blade and blade adapter from engine crankshaft.

3. Remove two bolts, lockwashers and nuts holding blade to blade adapter (if necessary).

When sharpening blade, follow the original angle of grind as a guide. It is extremely important that each cutting edge receives an equal amount of grinding to prevent an unbalanced blade. An unbalanced blade will cause excessive vibration when rotating at high speeds and may cause damage to the mower.

To insure safe operation of your unit, ALL nuts and bolts must be checked periodically for correct tightness.

Deck — The underside of the mower deck should be cleaned after each period of use as grass clippings, leaves, dirt and other matter will accumulate. This accumulation of grass clippings, etc., is undesirable as it will invite corrosion and may cause an uneven discharge of grass clippings at the next cutting.

The deck may be cleaned by tilting the mower forward or on its side and scraping clean with a suitable tool or by washing with a stream of water from a garden hose.

CAUTION

Do not direct the stream of water at a hot engine, as damage to the engine may result.

BELT REMOVAL

(Refer to drawing on page 8).

1. Be sure spark plug wire is removed from spark plug.

2. Remove the belt guard (Ref. No. 85) by removing the two screws on the belt guard.

3. Place a piece of plastic film under gas cap and tighten it. The plastic prevents gasoline from draining from the air vent in the cap.

4. Place the handle of mower on a table or bench so that the underside of deck is showing.

5. Remove cutting blade (Ref. No. 36) by removing blade bolt (Ref. No. 38).

6. Remove deck (Ref. No. 31) by removing four bolts (Ref. No. 32). NOTE: If you have a grass catcher adapter plate on your unit, remove only one bolt, one towards the front wheels.

7. Remove master link and chain (Ref. No. 59).

8. Remove rear wheel hub cap (Ref. No. 69) from right hand rear wheel only.

9. Remove cotter pin, ratchet (Ref. No. 70) and right hand rear wheel (Ref. No. 63).

10. Remove spring (Ref. No. 57) from cam assembly (Ref. No. 91).

11. Remove hex nut (Ref. No. 12) from rear axle assembly (Ref. No. 82) on the right hand side only.

12. Remove cotter pin from axle assembly (Ref. No. 82).

13. Pull idler assembly (Ref. No. 87) toward you and pull belt (Ref. No. 25) over idler.

14. Slide axle assembly (Ref. No. 82) to the left.

15. Pull belt down past P.T.O. pulley (Ref. No. 26) and over end of rear axle assembly (Ref. No. 82).

16. To replace with new belt, reverse the above steps.

Storage — The following steps should be taken to prepare lawn mower for storage:

1. Clean and lubricate mower thoroughly as described in the preceding instructions.

2. Refer to engine manual for correct engine storage instructions.

3. Coat mower's cutting blade with chassis grease to prevent rusting.

4. Store mower in dry, clean area.

HANDLE STORAGE

This model is so equipped to provide easy fold away handle storage.

1. Loosen the two plastic knobs on each side, center of handle.

2. Pull outward on the bottom of each side of the lower handle and push forward.

3. Fold the upper handle back and down.

To Take the Handle out of Storage Position.

1. Lift the upper handle up and towards the rear.

2. Pull the handle back until it **Locks** into the operator's position.

3. Tighten the two plastic knobs securely.

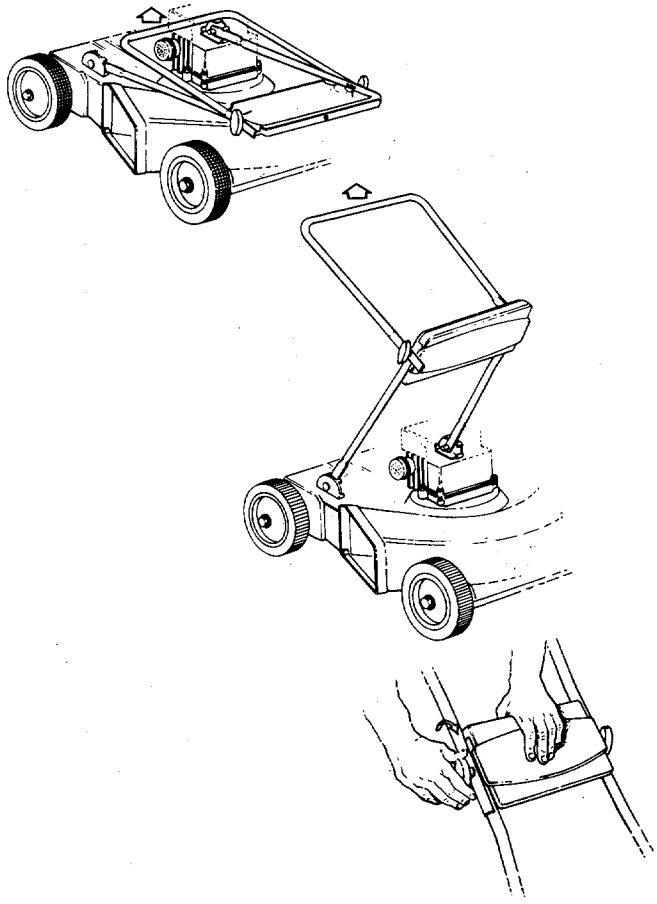

NOTE

The manufacturer DOES NOT recommend the use of any accessory on this Rotary Mower other than those manufactured by MTD Products Inc.

GRASS CATCHER Model No. **195-003A** is available as optional equipment for the mowers shown in this manual.

WARNING

1. The mower should not be operated without the entire grass catcher or chute deflector in place.
2. The mower should not be operated without the protective shield on the rear of the deck in place.

NOTE:

Under normal usage bag material is subject to wear and should be checked periodically. Be sure any replacement bag complies with the mower manufacturer's recommendations.

For replacement bags, use only factory authorized replacement bag No. **764-0119.**

IMPORTANT

After striking a foreign object, stop the engine, remove wire from spark plug. Thoroughly inspect the mower for any damage, and repair the damage before restarting and operating the mower.

125-280A

IF YOU WRITE TO US ABOUT THIS ARTICLE OR IF YOU ORDER REPLACEMENT PARTS ALWAYS MENTION THIS MODEL & SERIAL NO

MODEL

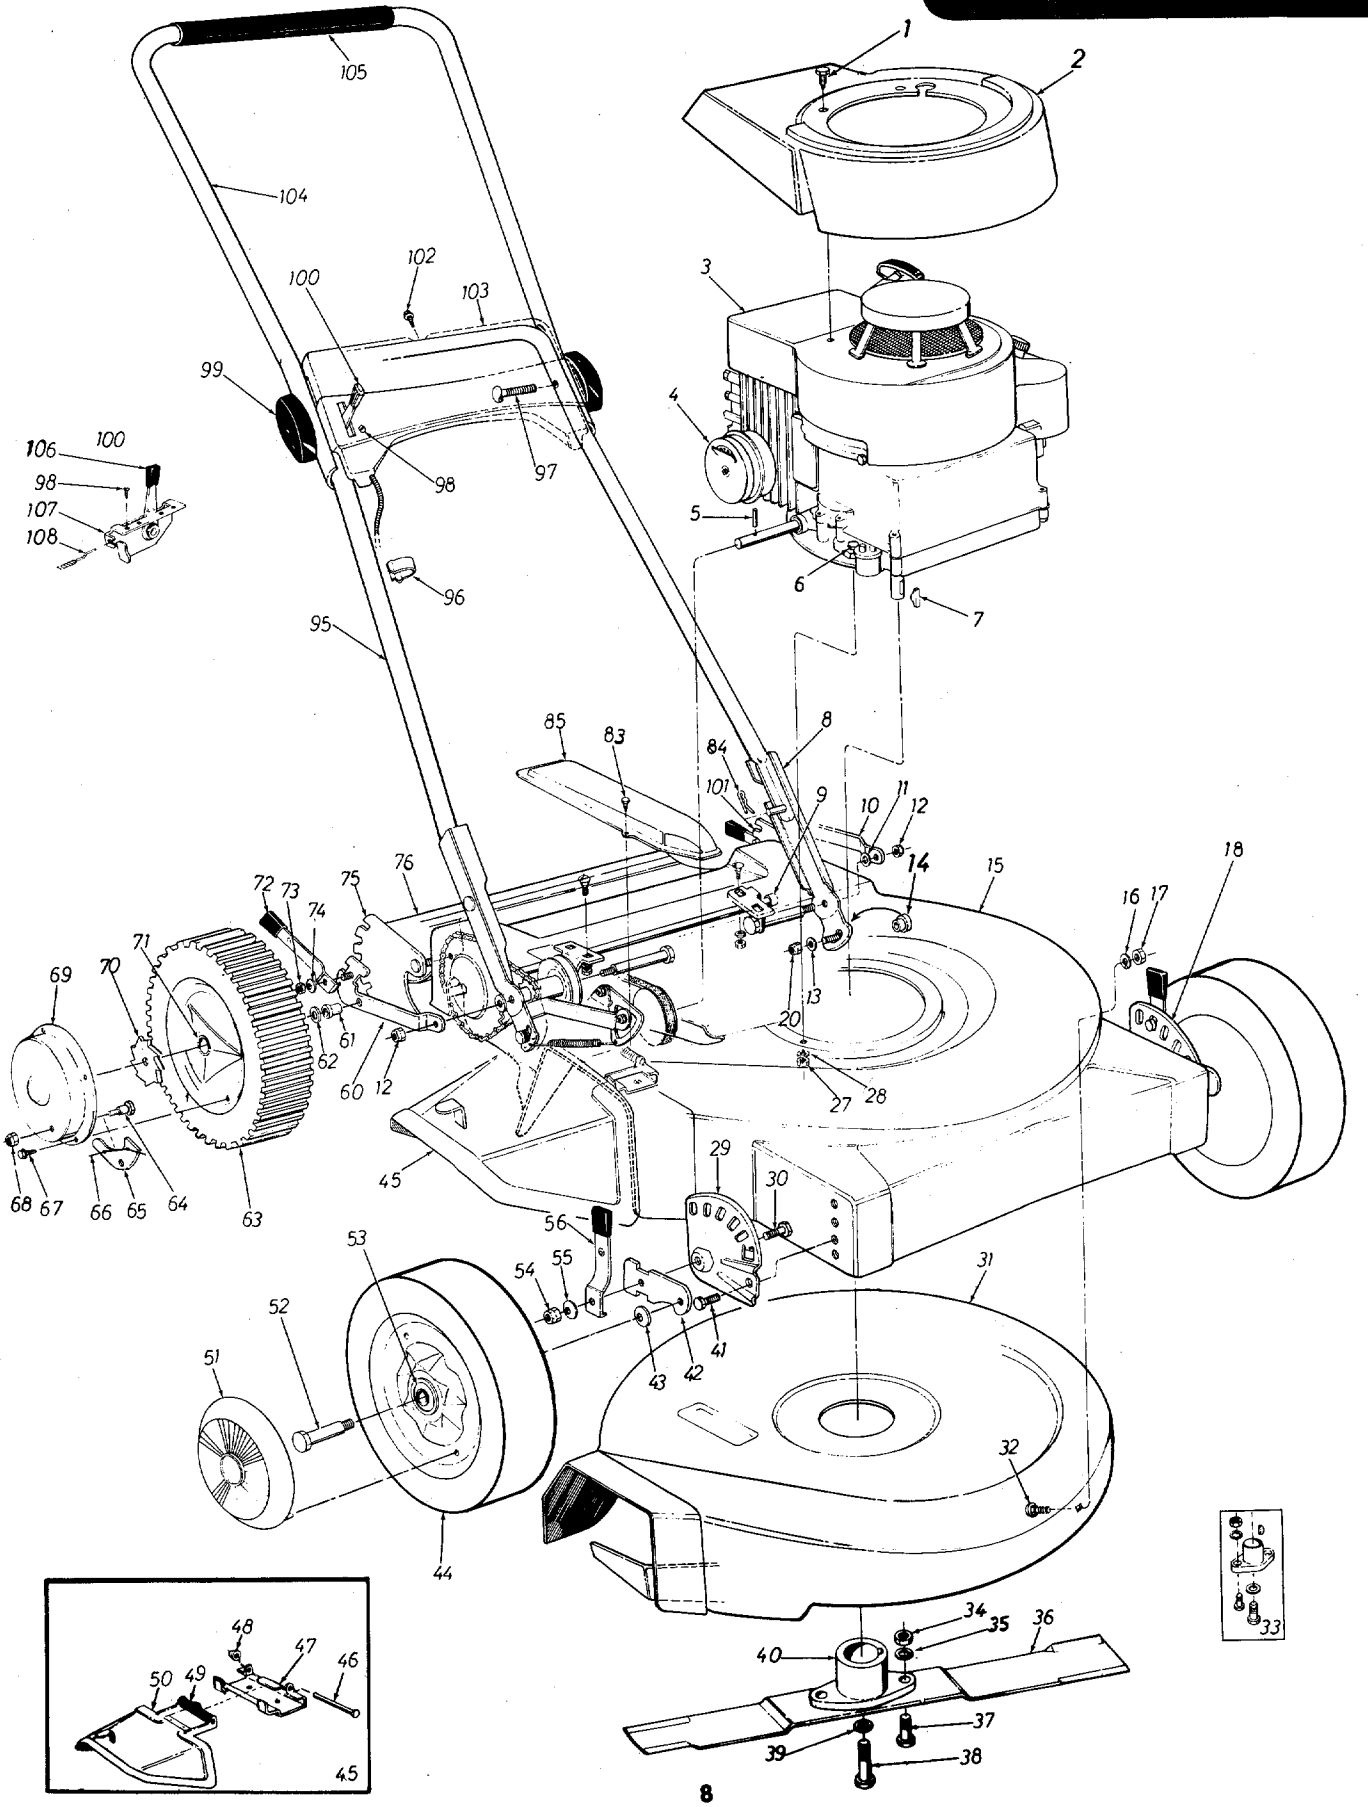

PARTS LIST FOR MODEL 125-280A

REF. NO.	PART NO.	COLOR CODE	DESCRIPTION	NEW PART
1	710-0227		Slot Hex Hd. Self Extr. Scr. # 8 x .38" Lg.*	
2	731-0275		Engine Shroud	
3	—		Engine	
4	~~09979~~		Exhaust Deflector MUFFLER FROM 1985	
5	715-0105		Spring Pin Spiral 3/16" Dia. x 1.50" Lg.	
6	710-0158		Hex Scr. 5/16-24 x 1.25" Lg.*	
7	714-0365		#6 Hi-Pro Key 5/32" x 5/8" Dia.	
8	12623		Handle Ext. Ass'y.	N
9	748-0141		Sleeve Bearing .630 I.D.	
10	10638		Pivot Bracket Ass'y.—L.H.	
11	736-0219		Belleville Wash. .400 I.D. x 1.13 O.D.	
12	712-0267		Hex Nut 5/16-18 Thd.*	
13	736-0159		Fl. Wash. .344 I.D. x .88 O.D.	
14	748-0233		Shoulder Spacer	N
15	11427	—462	Deck Ass'y.	
16	736-0119		L-Wash. 5/16" Scr.*	
17	712-0267		Hex Nut 5/16-18" Thd.*	
18	10950		Height Adj. Ass'y.—L.H.	
19	10951		Height Adj. Ass'y.—R.H.	
20	712-0158		Hex Center L-Nut 5/16-18 Thd.	
27	712-0123		Hex Nut 5/16-24 Thd.*	
28	736-0119		L-Wash 5/16" Scr.*	
29	10934		Index Plate Ass'y.—R.H.	
30	—		Weld Scr.—Part of Ref. No. 29	
31	11695	—462	Lower Deck Ass'y.	
32	710-0260		Carriage Bolt 5/16-18 x .62" Lg.*	
33	10769		Blade Adapter Kit	
34	712-0123		Hex Nut 5/16-24 Thd.*	
35	736-0119		L-Wash. 5/16" Scr.*	
36	742-0124		21" Blade	
37	710-0117		Hex Scr. 5/16-24 x 1.00" Lg. H.T.	
38	710-0459		Hex Scr. 3/8-24 x 1.50" Lg. H.T.	
39	736-0217		L-Wash 3/8" Scr. Heavy Duty	
40	10769		Blade Adapter Kit	
41	710-0209		Hex Sems Scr. 3/8-16 x .62" Lg.*	
42	10937		Wheel Pivot Bar	
43	736-0105		Belleville Wash.	
44	09392-514		Front Wheel Ass'y.—Comp.	
45	11679	—462	Chute Deflector Ass'y.—Comp.	
46	711-0555		Pivot Pin	
47	11130	—462	Adapter Plate	
48	726-0106		Push Nut 1/4" Rod	
49	732-0253		Torsion Spring	
50	11141	—462	Chute Deflector Ass'y.	
51	731-0124		Hub Cap	
52	738-0102		Shoulder Scr. .498" Dia. x 1.450	
53	07006		Fortiflex Bearing	
54	712-0116		Hex Ins. L-Nut 3/8-24 Thd.	
55	736-0219		Belleville Wash.	
56	10949		Spring Lever Ass'y. with Knob	
60	10639		Pivot Bracket Ass'y.—R.H.	
61	748-0142		Flange Bearing	
62	736-0192		Fl-Wash. .531 I.D. x .93 O.D.	
63	734-0538		Rear Wheel Ass'y.—Comp.	
64	738-0137		Shoulder Scr. .342" Dia. x .268" Lg.	
65	748-0188		Pawl	
66	10622		Nylon Spring	
67	710-0227		Slot Hex Hd. Self Extr. Scr. # 8 x .38" Lg.*	
68	712-0324		Hex Ins. L-Nut 1/4-20 Thd.	
69	10647		Hub Cap—Rear	
70	748-0187		Ratchet—Rear Wheel	
71	748-0125		Sleeve Bearing	
72	10530		Spring Lever Ass'y. with Knob	
73	712-0342		Hex Jam Nut 3/8-16 Thd.*	
74	736-0105		Belleville Wash.	
75	10642	462	Index Plate Ass'y.—R.H.	
76	12250	~~458~~	Rear Protective Shield Ass'y.—Comp.	
83	710-0224		Hex AB-Tapp Scr. #10 x .50" Lg.	
84	714-0104		Internal Cotter Pin 5/16" Dia.	
85	10645	—462	Belt Cover	
95	10970		Lower Handle	
96	746-0128		Cable Clip	
97	710-0405		Curved Carriage Bolt 5/16-18 x 1.75" Lg.	
98	710-0227		Slot Hex Hd. Self Extr. Scr. #8 x .38" Lg.*	
99	09966		Handle Knob Ass'y.	
100	11611		Throttle Control Ass'y.—Comp.	
101	10641		Index Plate Ass'y.—L.H.	
102	710-0148		Hex Wash. Hd. F-Tapp. Scr. #8-32 x .38" Lg.*	
103	11606	—462	Handle Panel	
104	10011		Upper Handle	
105	718-~~0144~~	143	Grip	
106	07470		Throttle Control—Knob	
107	11598		Throttle Control Ass'y.	
108	746-0231		Conduit and Wire	

*For faster service obtain standard nuts and bolts locally. If these items cannot be obtained locally, order by part number and size as shown on the parts list.

(462—Red Flake)

When ordering parts, if color or finish is important use the appropriate color code shown above (e.g. Red Flake Finish—11427 (462).)

The engine is not under warranty by the mower manufacturer. If repairs or service is needed on the engine, please contact your nearest authorized engine service outlet. Check the "Yellow Pages" of your telephone book under "Engines—Gasoline."

125-280A

IF YOU WRITE TO US ABOUT THIS ARTICLE OR IF YOU ORDER REPLACEMENT PARTS ALWAYS MENTION THIS MODEL & SERIAL NO

MODEL

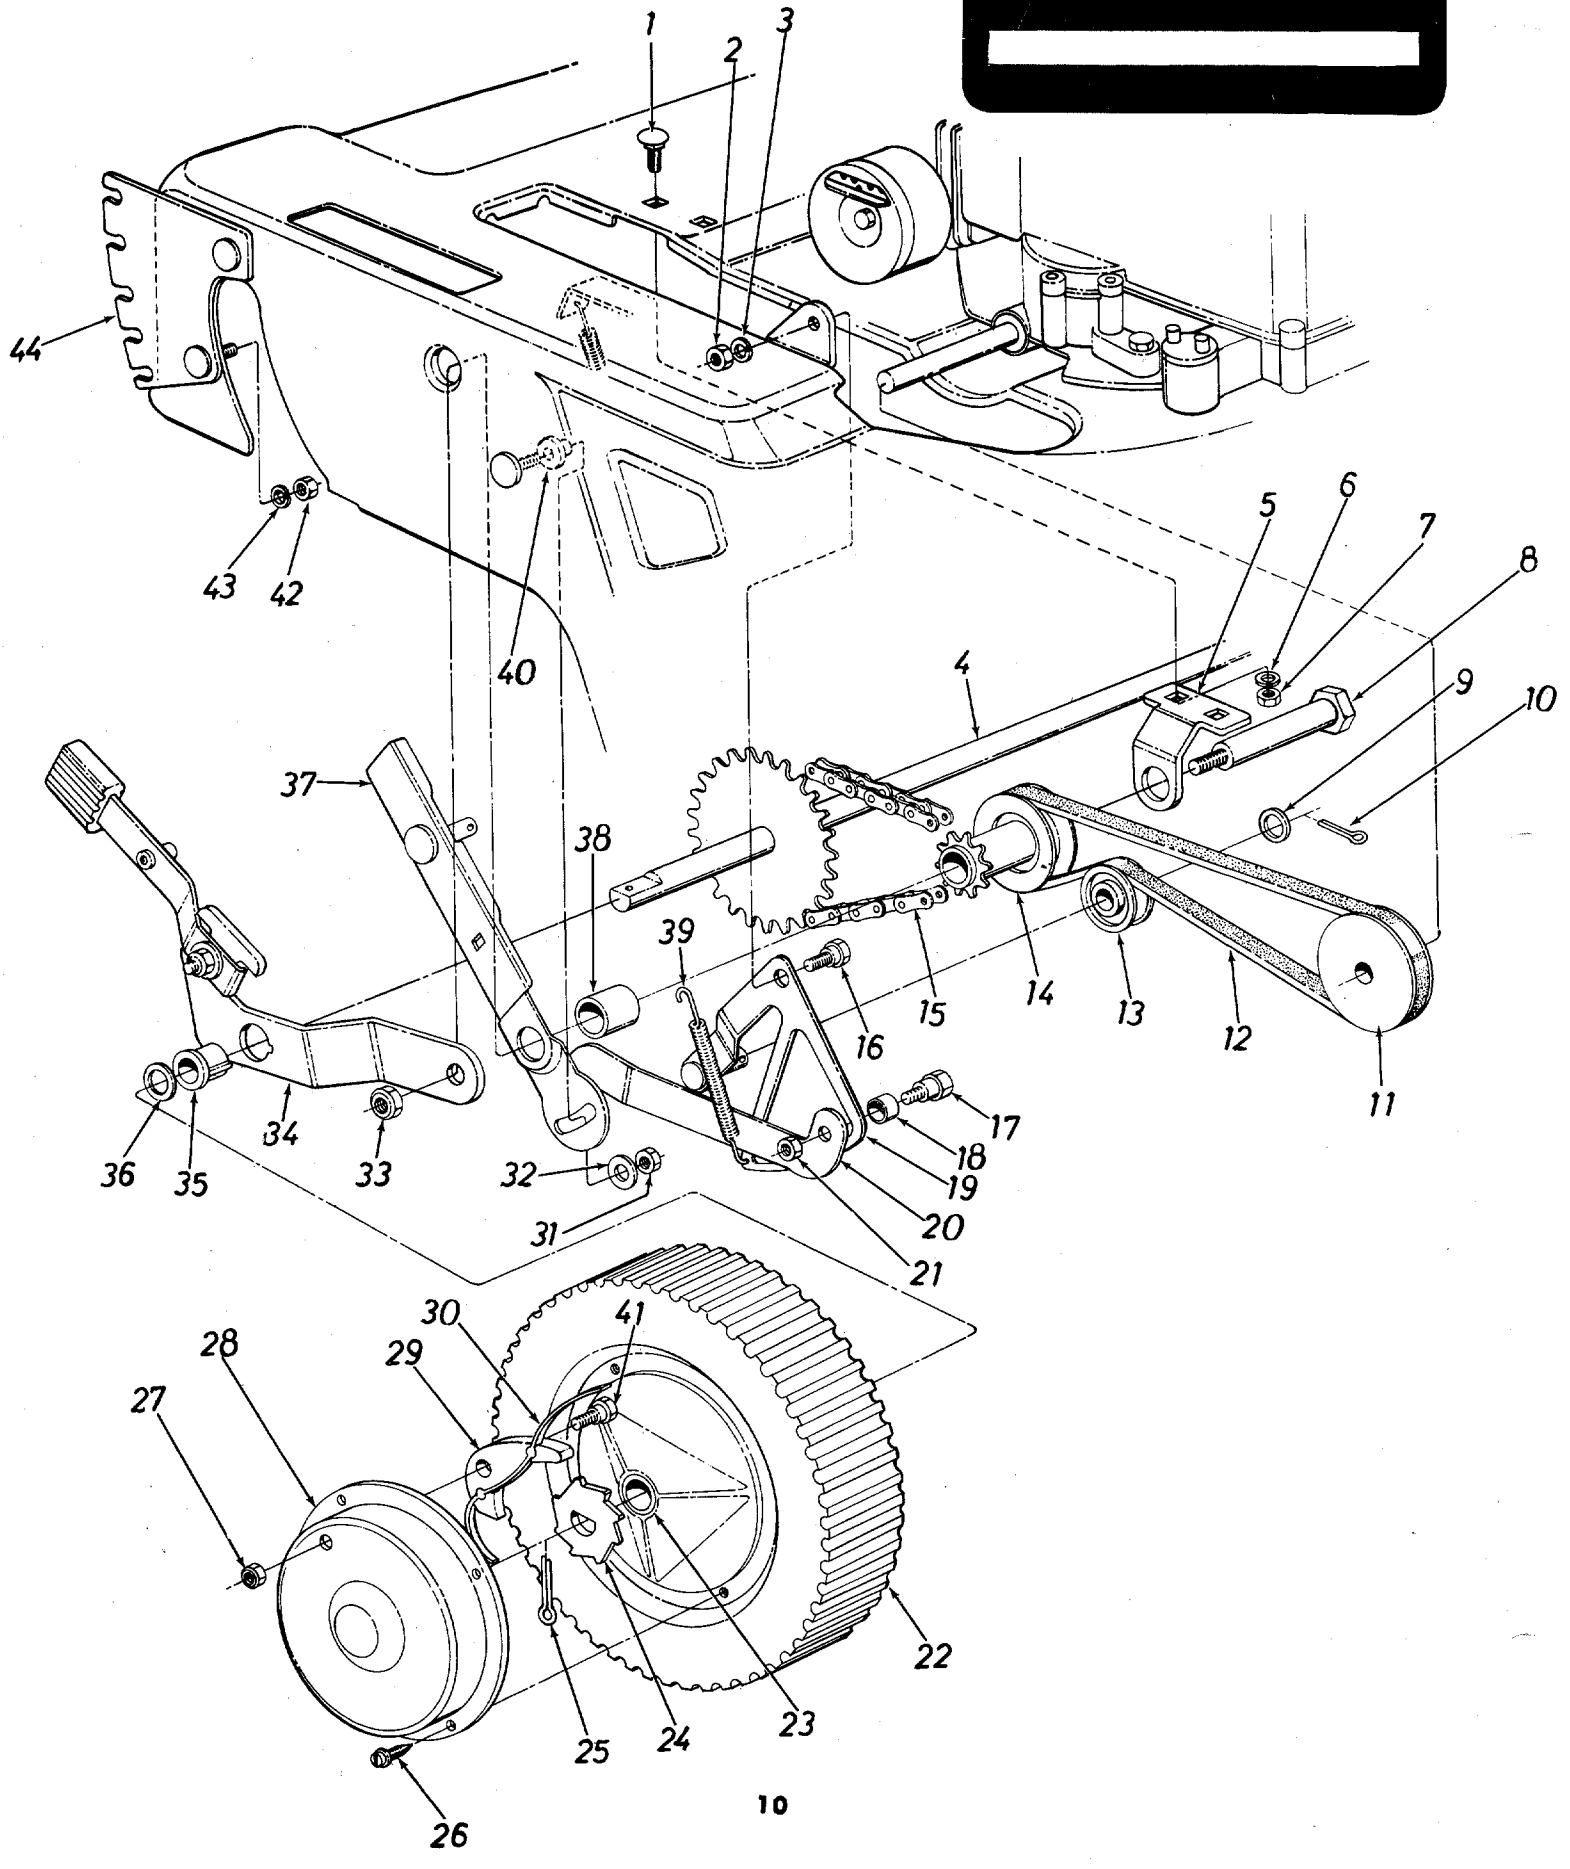

PARTS LIST FOR MODEL 125-280A

REF. NO.	PART NO.	COLOR CODE	DESCRIPTION	NEW PART
1	710-0260		Crg. Bolt 5/16-18 x .62" Lg.*	
2	712-0267		Hex Nut 5/16-18 Thd.*	
3	736-0119		L.-Wash. 5/16" Scr.*	
4	10646		Rear Shaft Ass'y.	
5	10644	—462	Bracket	
6	736-0119		L.-Wash. 5/16" Scr.*	
7	712-0267		Hex Nut 5/16-18 Thd.*	
8	738-0136		Shld. Scr. .625" Dia. x 3.380" Lg.	
9	736-0160		Fl.-Wash. .531 I.D. x .930 O.D.	
10	714-0115		Cotter Pin 1/8" Dia x 1.00" Lg.*	
11	756-0115		Engine Pulley	
12	754-0114		V-Belt 1/2" x 24" Lg.	
13	756-0192		Plastic Flat Idler	
14	756-0191		Pulley with 9 Tooth Sprkt. Ass'y.	
15	713-0144		#48 Chain 1/2" Pitch x 31 Links	
	713-0122		#48 Master Link 1/2" Pitch	
16	738-0140		Shld. Scr. .437" Dia. x .180	
17	738-0141		Shld. Scr. .437" Dia. x .350	
18	750-0122		Sleeve .450 I.D. x .565 O.D.	
19	11920		Cam Ass'y.	
20	12624		Pivot Arm Ass'y.	N
21	712-0158		Hex Ctr. L.-Nut 5/16-18 Thd.	
22	734-0538		Rear Wheel Ass'y. Compl.	
23	748-0125		Sleeve Bearing	
24	748-0187		Ratchet—Rear Wheel	
25	714-0115		Cotter Pin 1/8" Dia. x 1.00" Lg.*	
26	710-0227		Slot Hex Hd. Self Extr. Scr. #8 x .38" Lg.	
27	712-0324		Hex Ins. L.-Nut 1/4-20 Thd.	
28	10647		Hub Cap—Rear	
29	748-0188		Pawl	
30	10622		Nylon Spring	
31	712-0158		Hex Ctr. L.-Nut 5/16-18 Thd.	
32	736-0159		Fl.-Wash. .344 I.D. x .88 O.D.	
33	712-0267		Hex Nut 5/16-18 Thd.*	
34	10639		Pivot Bracket Ass'y.—R.H.	
35	748-0142		Flange Bearing	
36	736-0192		Fl.-Wash. .531 I.D. x .93 O.D.	
37	12624		Pivot Arm Ass'y.	N
38	748-0192		Spacer .635 I.D. x .890 O.D. x .80 Lg.	
39	732-0265		Spring 3/8" O.D. x 3.17" Lg.	
40	748-0233		Shoulder Spacer	N
41	738-0137		Shld. Scr. .342" Dia. x .268" Lg.	
42	712-0267		Hex Nut 5/16-18 Thd.*	
43	736-0119		L.-Wash. 5/16" Scr.*	
44	10642		Index Plate Ass'y.—R.H.	

***For faster service obtain standard nuts and bolts locally. If these items cannot be obtained locally, order by part number and size as shown on the parts list.**

(462—Red Flake)

When ordering parts, if color or finish is important use the appropriate color code shown above (e.g. Red Flake Finish—11427 (462).)

The engine is not under warranty by the mower manufacturer. If repairs or service is needed on the engine, please contact your nearest authorized engine service outlet. Check the "Yellow Pages" of your telephone book under "Engines—Gasoline."

PARTS INFORMATION

DEFECTIVE OR MISSING PARTS must be reported to the factory immediately. Such claims must include your model number and date of purchase.

POWER EQUIPMENT PARTS AND SERVICE

Parts and service for all MTD manufactured power equipment are available through the authorized service firms listed below. All orders should specify the model number of your unit, parts numbers, description of parts and the quantity of each part required.

A 1 Engine & Mower Co.
327 East 9th Street
Salt Lake City, Utah 84102

Auto Electric & Carburetor Co.
2525 4th Avenue, S.
P. O. Box 1948
Birmingham, Alabama 35233

Automotive Equipment Service Co.
3117 Holmes Street
Kansas City, Missouri 64109

Bailey's Rebuild Inc.
1325 E. Madison Street
Seattle Washington 98102

Bleckrie, Inc.
7900 Lorain Avenue
Cleveland, Ohio 44102

Brown Equipment Distributor Inc.
110 Beech Street
Corydon, Indiana 47112

Bullard Supply
2409 Commerce Street
Houston, Texas 77003

Catto & Putty, Inc.
P. O. Box 2408
510 Soledad Street
San Antonio, Texas 78205

Center Supply Company
6867 New Hampshire Avenue
Takoma Park, Maryland 20012

Dixie Sales Company
P. O. Box 1408
327 Battleground Avenue
Greensboro, North Carolina 27402

East Point Cycle & Key Shop
1617 Whiteway
East Point, Georgia 30044

Gamble Distributors
West End Avenue
Carthage, New York 13619

Garden Equipment Co., Inc.
6600 Cherry Avenue
Long Beach, California 90805

Gardenville Supply, Inc.
Pipersville, Pennsylvania 18947

Henry W. O'Neil & Assoc., Inc.
410 North Goodman Street
Rochester, New York 14609

Henzler, Inc.
2015 Lemay Ferry Road
St. Louis, Missouri 63125

Kenton Supply
8216 North Denver Avenue
Portland, Oregon 97217

Kimber's Inc.
115 W. Geddes St.
Syracuse, New York 13204

Marr Brothers
423 E. Jefferson
Dallas, Texas 75203

McClure Lawn & Garden Supply
1114 Lexington Avenue
Mansfield, Ohio 44907

Memphis Cycle & Supply Co.
421 Monroe Avenue
Memphis Tennessee 38103

Merten B. Collins Co.
300 Birnie Avenue
Springfield, Massachusetts 01107

Mor-All of Florida, Inc.
365 Greco Avenue
Coral Gables, Florida 33146

National Central
687 Seville Rd.
Wadsworth, Ohio 44281

Parts & Sales Inc.
2101 Industrial Pkwy.
Elkhart, Indiana 46514

Power Equipment Distributor
36463 So. Gratiot Avenue
Mt. Clemens, Michigan 48043

Power Lawn & Garden Equip. Co.
2551-2571 J. F. Kennedy Road
Dubuque, Iowa 52001

Radco Distributors
2403 Market Street
P. O. Box 3216
Jacksonville, Florida 3220[illegible]

Raub Supply Company
James & Mulberry Sts.
Lancaster, Pennsylvania 17604

Richmond Battery & Ignition
P. O. Box 25369 — 957 Myers St.
Richmond, Virginia 23260

R. P. W., Inc.
623 S. 16th Street
Omaha, Nebraska 68102

Smith Hardware Company
515 N. George Street
Goldsboro, North Carolina 27530

South Denver Lawn Equip. Co.
527 West Evans
Denver, Colorado 80223

Suhren Engine
8330 Earhart Blvd.
New Orleans, Louisiana 70118

Sutton's Lawn Mower Shop
Route 4, Box 343
North Little Rock, Arkansas 72117

Woodson Sales & Service
1702 North Sylvania
Ft. Worth, Texas 76111

BRIGGS & STRATTON, TECUMSEH AND PEERLESS PARTS AND SERVICE

Briggs & Stratton, Tecumseh and Peerless parts and service should be handled by your nearest authorized engine service firm. Check the yellow pages of your telephone directory under the listing *Engines — Gasoline*, Briggs & Stratton or Tecumseh Lauson — Power Products.

WARRANTY PARTS AND SERVICE POLICY

The purpose of warranty is to protect the customer from defects in workmanship and materials, defects which are NOT detected at the time of manufacture. It does not provide for the unlimited and unrestricted replacement of parts. Use and maintenance are the responsibility of the customer. The manufacturer cannot assume responsibility for conditions over which it has no control. Simply put, if it's the manufacturer's fault, it's the manufacturer's responsibility; if it's the customer's fault, it's the customer's responsibility.

CLAIMS AGAINST THE MANUFACTURER'S WARRANTY INCLUDES

1. **Replacement** of **Missing Parts** on new equipment.
2. **Replacement** of **Defective Parts** within the warranty period.
3. **Repair** of **Defects** within the warranty period.

All claims MUST be substantiated with the following information:

1. **Model Number** of unit involved.
2. **Date** unit was **purchased** or first put into service.
3. **Date of failure.**
4. **Nature of failure.**